

INSTRUCTIONS FOR ASSEMBLY AND IN-GROUND INSTALLATION

This box contains all parts for a standard in-ground installation with 45 inches above the ground. Important: Assemble and tighten post completely before cementing in ground to prevent face plate from facing in the wrong direction.



STEP 1

Assemble the three pieces of the mounting post together by screwing them together.

STEP 2

Determine the location of the Mounting Post installation.

STEP 3

Dig a hole at least 22 inches deep and wide enough to accommodate the concrete used to hold the post in place.

STEP 4


If for use with hard wire access controls, provide path for wires. We recommend using PVC conduit.

STEP 5

DO NOT continue unless post is assembled and tightened completely. Cement post in place using a level to achieve a level and plumb installation.

STEP 6

Install keypad/intercom according to products instructions.

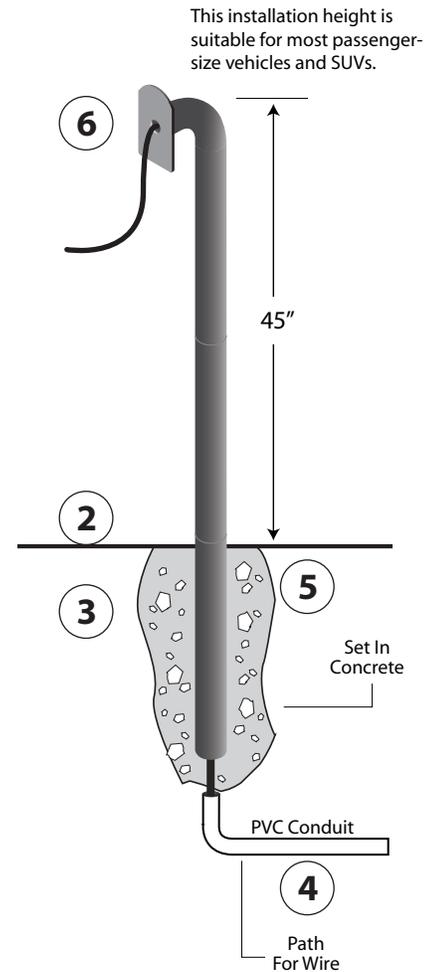


This installation height is suitable for most passenger-size vehicles and SUVs.

*See below for other mounting options. Additional hardware not included.




**F102 Flange Kit
Sold Separately**

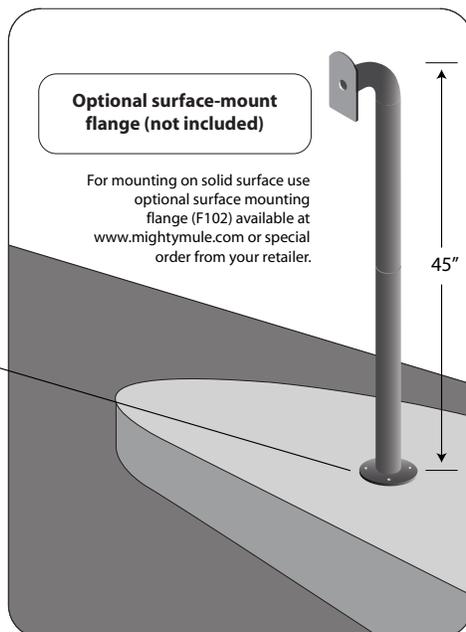

Optional surface-mount flange (not included)


For mounting on solid surface use optional surface mounting flange (F102) available at www.mightymule.com or special order from your retailer.

45"

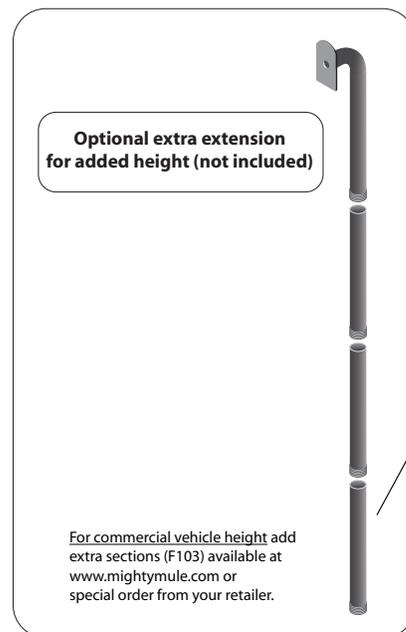

Optional extra extension for added height (not included)

For commercial vehicle height add extra sections (F103) available at www.mightymule.com or special order from your retailer.

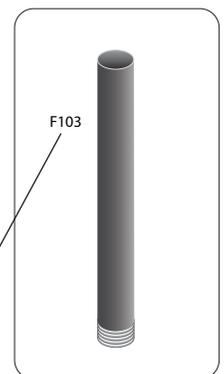

**F103 Extensions
Sold Separately**